


# Implementing Storage spaces and configuring the sharing in Server 2019-08

## 1. Introduction


Storage Spaces in Windows Server 2019 allows combining multiple physical disks into a storage pool. From this pool, you can create virtual disks with resiliency options like **Simple, Mirror, or Parity**. It is widely used for flexible, cost-effective storage. After creating storage, we configure **file sharing** so that users on the network can access shared folders.

## 2. Prerequisites

- Windows Server 2019 installed.

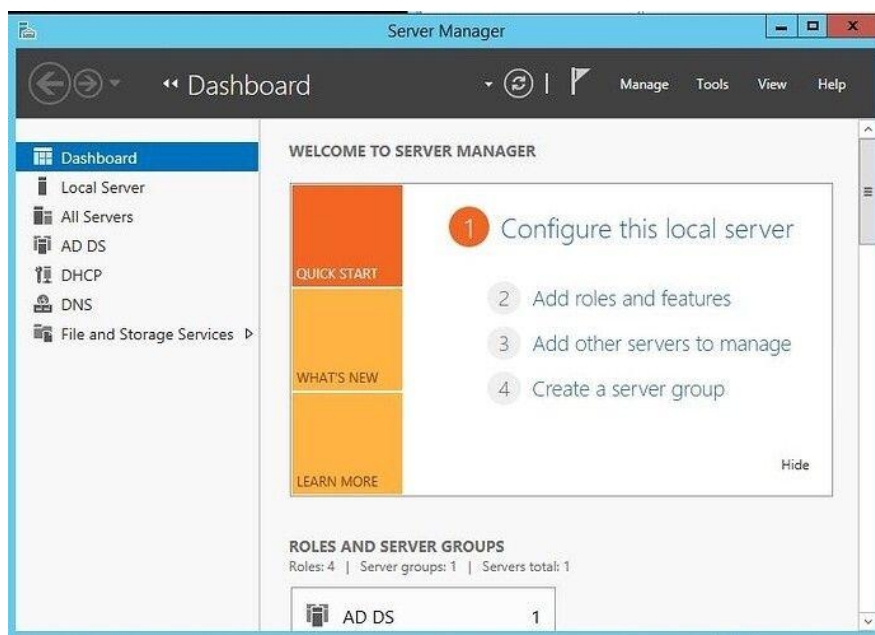

- Minimum **two physical or virtual hard disks** (apart from OS disk).

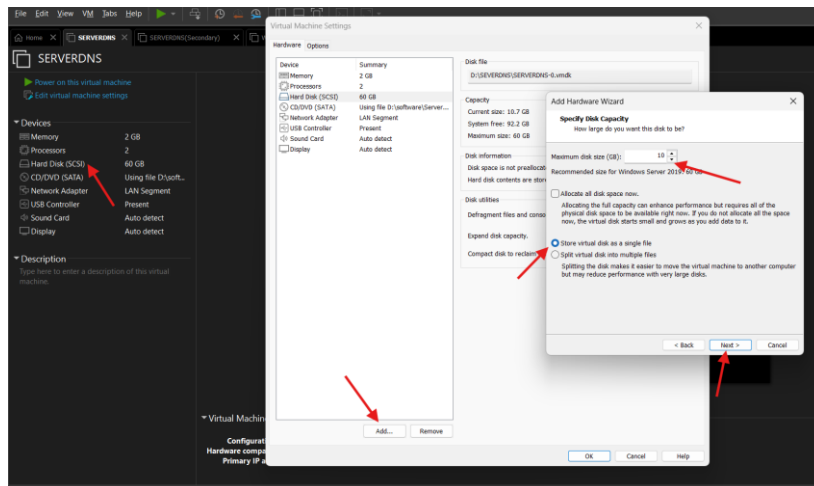

- Administrator privileges.


### 3. Implementing Storage Spaces


#### Step 1: Open Storage Spaces

- Go to **Server Manager** → **File and Storage Services** → **Storage Pools**.

#### Step 2: Create a New Storage Pool

- Under **Storage Pools**, click **New Storage Pool**.

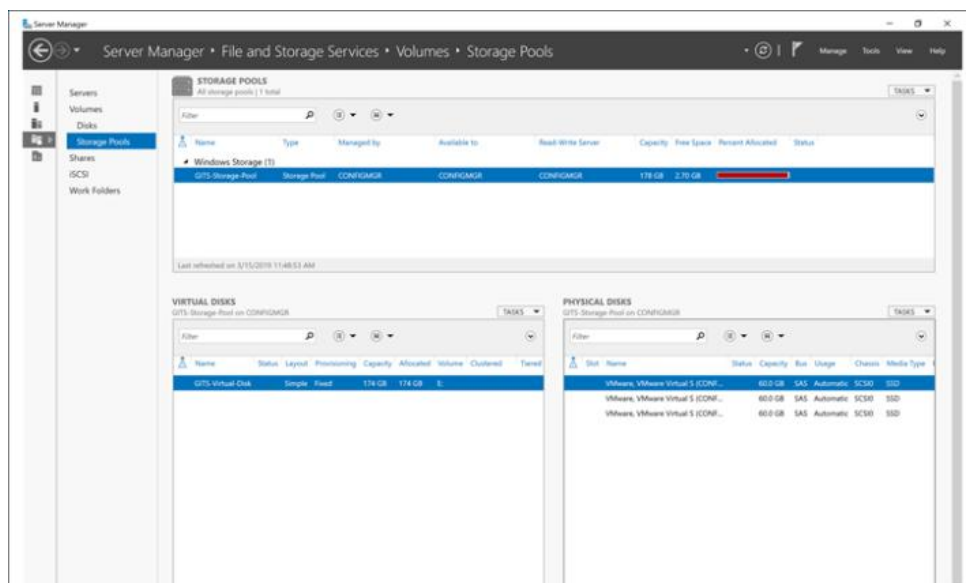


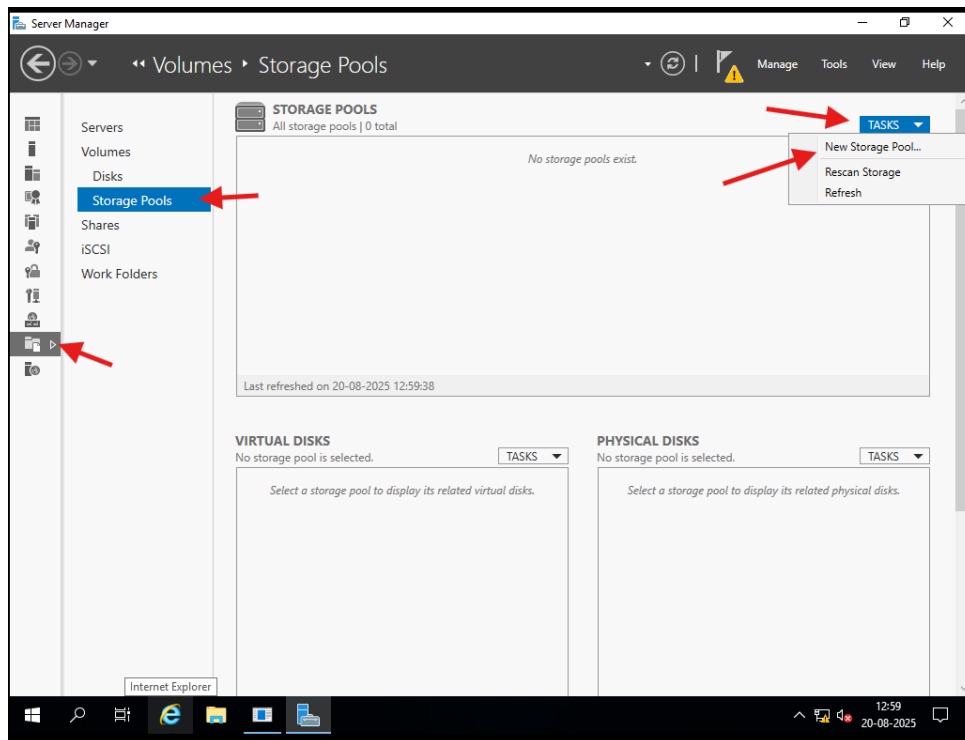

- Select available disks (other than the system disk).
- Give a name (Example: wiproPool).
- Finish wizard, and pool is created.

### Step 3: Create a Virtual Disk

- Right-click on the new pool → **New Virtual Disk**.

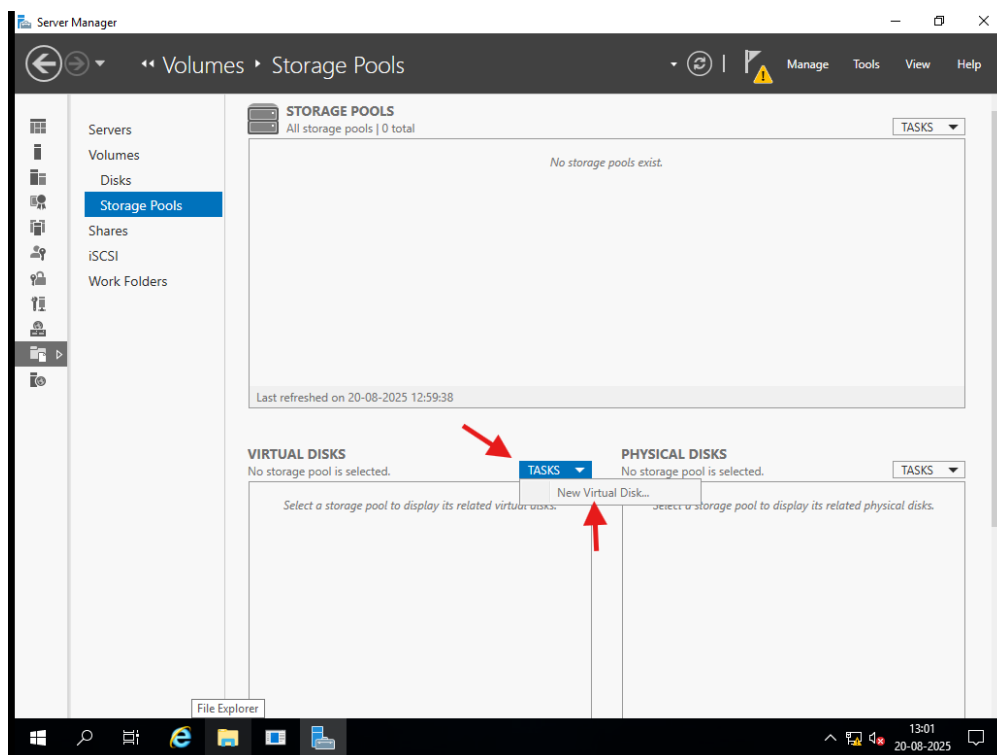

- Select storage layout:
  - **Simple** – no resiliency, best performance.
  - **Mirror** – keeps duplicate copies, fault tolerance.
  - **Parity** – saves space and offers redundancy.
- Assign size (example: 50 GB).
- Complete wizard.


#### Step 4: Create a Volume

- After disk creation, wizard asks to create a volume.
- Assign **Drive Letter (E:)**.
- Format with **NTFS** or **ReFS**.
- Give a label (Example: SharedStorage).


### 4. Configuring File Sharing

#### Step 1: Create a Shared Folder

- Create a folder inside the new volume (Example: E:\DataShare).

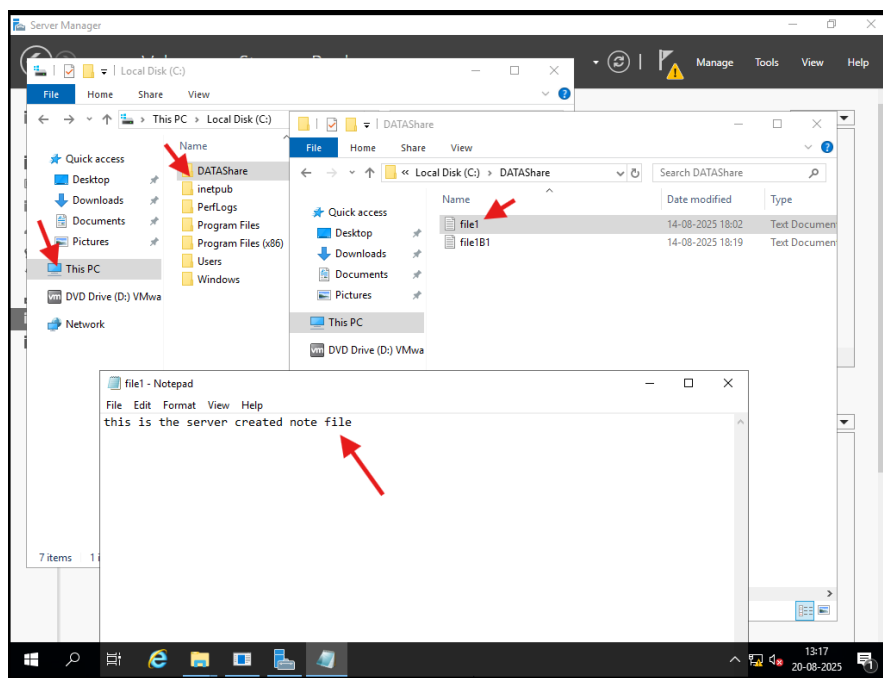


- Right-click → **Properties** → **Sharing Tab** → **Advanced Sharing**.
- Enable **Share this folder**.
- Give a share name (Example: DataShare).

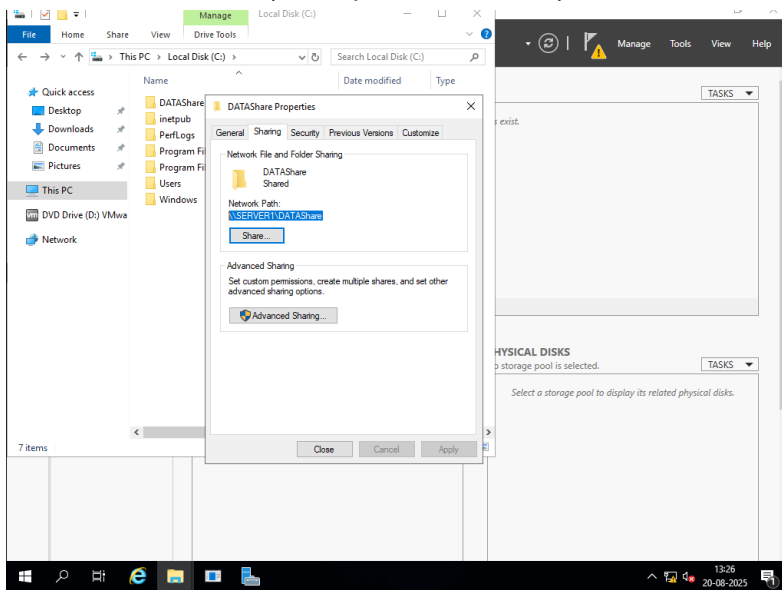


## Step 2: Set Permissions

- In the sharing wizard, click **Permissions**.
- Add users or groups (Example: Domain Users).
- Assign **Read**, **Change**, or **Full Control** based on requirement.

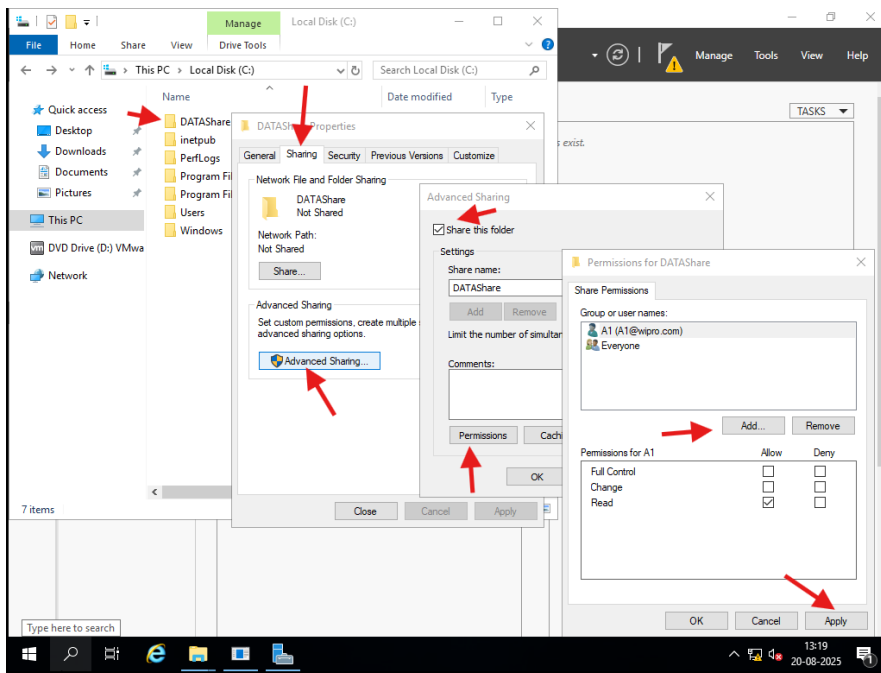

## Step 3: Access from Client System

- From another computer, press **Win + R**, type **\\ServerName\DataShare**.

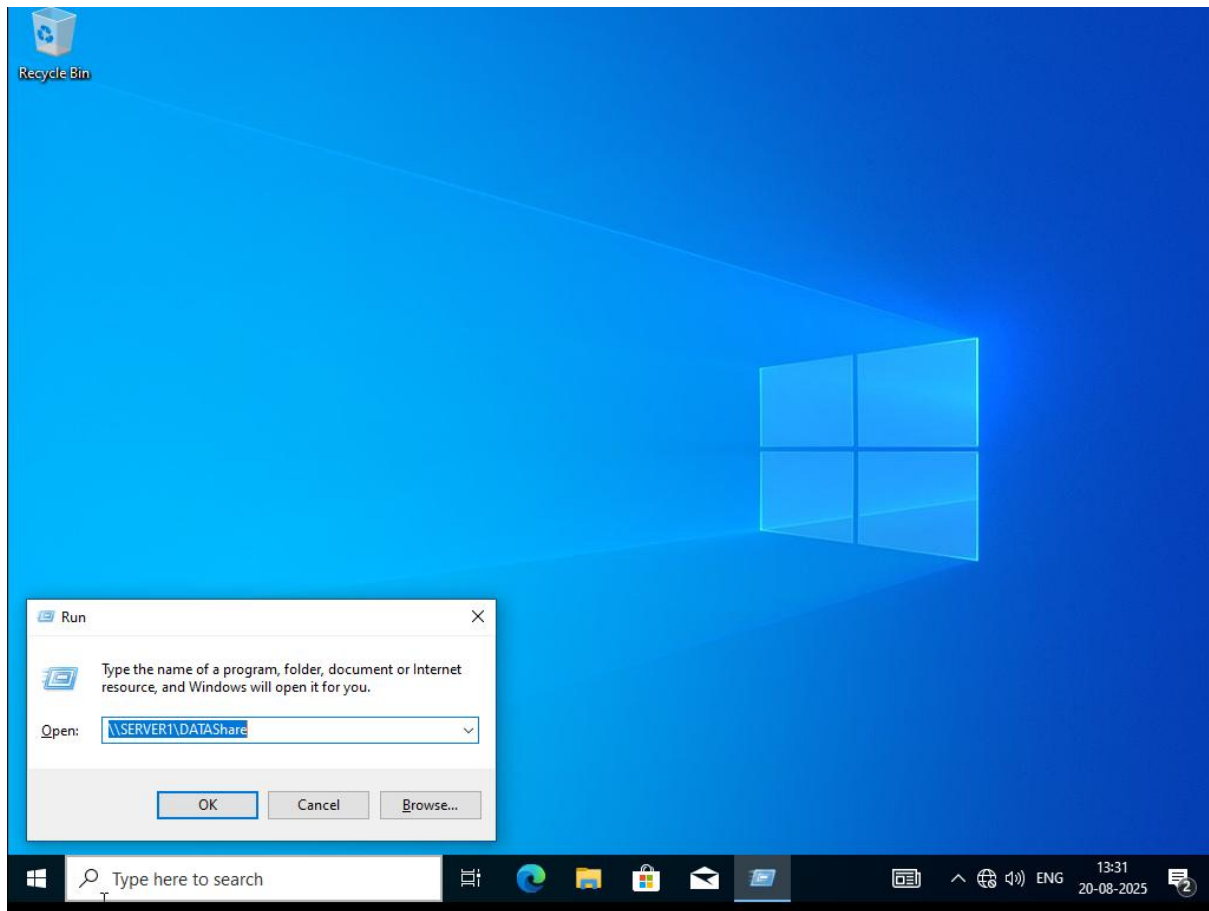

- The shared folder opens with the given permissions.

